SAMSUNG

SGH-M628
User's Guide

Some of the contents in this guide may differ from your phone depending on the software of the phone or your service provider.
Bluetooth QD ID: B013825

World Wide Web
http://www.samsungmobile.com

Printed in Korea
Code No.:GH68-18913A
English (HK). 07/2008. Rev. 1.0

Installing the SIM card and battery

1. Remove the battery cover and insert the SIM card.

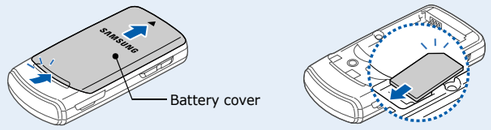

2. Install the battery and reattach the battery cover.

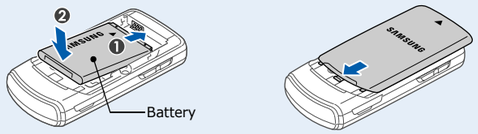

Charging the battery

1. Plug the supplied travel adapter into the phone and a power outlet.

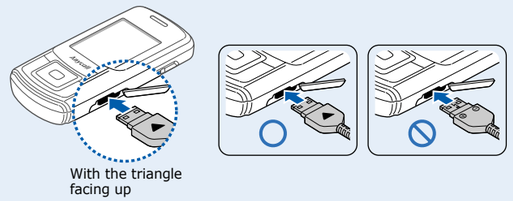

2. When charging is finished, unplug the travel adapter.

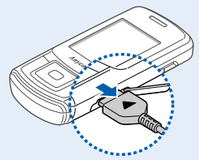

Note: Do not remove the battery from the phone without unplugging the travel adapter first. Otherwise, the phone may be damaged.

Phone layout and key functions

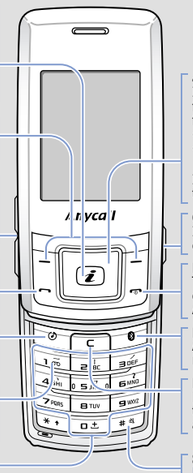

Web access/ Confirm key
In Idle mode, accesses the web browser.
In Menu mode, selects the highlighted option or confirms input.

Soft keys
Perform functions indicated by the text above the key.

Volume keys
In Idle mode, adjust the keypad tone volume.
Send an SOS message.
▶ *SOS mode*

Dial key
Makes and answers a call.
In Idle mode, retrieves the most recent calls.

Music player key
Accesses the **Music player** menu.

Voice mail server key
In Idle mode, accesses your voice mail server when held down.

Alphanumeric keys

4-way navigation keys
In Idle mode, access the following menus or functions directly:
- **Up**: My menu mode
- **Down**/**Left**/**Right**: your favourite menus

In Menu mode, scroll through menu options.

Camera key
In Idle mode, turns on the camera when held down.

Power/End key
Turns the phone on or off when held down.
Also, ends a call.

Bluetooth key
Accesses the **Bluetooth** menu.

Delete key
Deletes characters from the display or items in an application.

Silent mode key
▶ *Silent mode*

Silent mode
Press and hold # in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

Keypad lock mode
When you close the phone, it locks the exposed keys to ignore accidental key pressing. To unlock, press the **Unlock** soft key and then the **OK** soft key.

SOS mode
With the phone closed, press the Volume keys 4 times to send an SOS message to preset phone numbers. Once the SOS message is sent, the phone will change to SOS mode and will receive calls only from the registered recipients. Upon receiving a call from the SOS message recipients, the phone will automatically answer the call. Press to exit SOS mode.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

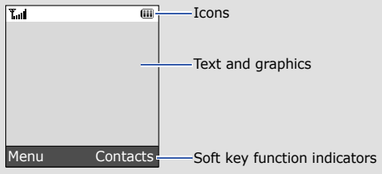

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	GPRS (2.5G) network
	Connecting to GPRS (2.5G) network
	Transferring data in GPRS (2.5G) network
	Call in progress
	Out of your service area or Offline mode
	Connected with PC
	Call diverting active
	Home Zone
	Office Zone
	Roaming network
	New message

Icon	Description
	SOS message feature active
	Bluetooth active
	Bluetooth hands-free car kit or headset connected
	Memory card inserted
	Alarm set
	FM radio on
	Silent mode (Vibration)
	Silent mode (Mute)
	Call ringer set to vibrate
	Whisper mode, during a call
	Mute mode, during a call
	Battery power level

Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key ( ) or right soft key ( ) to perform the function indicated.

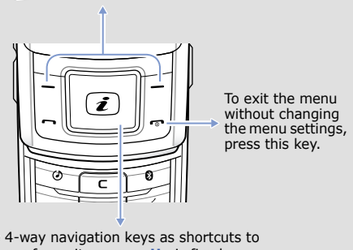

Use the 4-way navigation keys as shortcuts to access your favourite menus. **Up** is fixed as a shortcut to My menu mode.

1. In Idle mode, press the **Menu** soft key.
2. Select **Settings** → **Phone settings** → **Shortcuts**.
3. Select a key.
4. Select a menu to be assigned to the key.

To select or modify a menu or feature:

1. In Idle mode, press the **Menu** soft key.
2. Press the Navigation keys to reach a desired menu and then press the **Select** soft key or .
3. If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or to enter the submenu.

   If the selected menu contains additional submenus, repeat this step.
4. Press the Navigation keys to find the setting of your choice.
5. Press the **Select** soft key or to confirm your chosen setting.

Shortcut numbers

You can quickly access the menu you want by using shortcut numbers. The shortcut number displays in front of the menu name in Menu mode.

Switching on or off the phone

1. Press and hold for more than one second to switch on the phone.
2. Press and hold for more than two seconds to switch off the phone.

Changing the display language

1. In Idle mode, press the **Menu** soft key.
2. Select **Settings** → **Phone settings** → **Language** → **Language**.
3. Select a language.

Making a call

1. In Idle mode, enter an area code and phone number, and press .
2. Press to end the call.

Answering a call

1. When the phone rings, press the **Accept** soft key or to answer a call.

   Press the **Reject** soft key or to reject the call.
2. Press to end the call.

Menu map

1. **Call log**
   - 1.1 Recent contacts
   - 1.2 Missed calls
   - 1.3 Dialled calls
   - 1.4 Received calls
   - 1.5 Delete all
   - 1.6 Call manager
2. **Phonebook**
   - 2.1 Contact list
   - 2.2 Create contact
   - 2.3 Group
   - 2.4 Speed dial
   - 2.5 My namecard
   - 2.6 Own numbers
   - 2.7 Management
3. **Applications**
   - 3.1 Alarm
   - 3.2 Music player
   - 3.3 Voice recorder
   - 3.4 FM radio
   - 3.5 Java world
   - 3.6 Memo
   - 3.7 World clock
   - 3.8 Calculator
   - 3.9 Converter
   - 3.10 Timer
   - 3.11 Stopwatch
4. **Brower**
   - 4.1 Home
   - 4.2 Enter URL
   - 4.3 Bookmarks
   - 4.4 Clear cache
   - 4.5 Browser settings
5. **Messages**
   - 5.1 Create message
   - 5.2 My messages
   - 5.3 Templates
   - 5.4 Delete all
   - 5.5 Settings
   - 5.6 SOS messages
   - 5.7 Memory status
6. **My files**
   - 6.1 Images
   - 6.2 Videos
   - 6.3 Music
   - 6.4 Sounds
   - 6.5 Other files
   - 6.6 Memory card*
7. **Calendar**
8. **Camera**
9. **Settings**
   - 9.1 Time and date
   - 9.2 Phone settings
   - 9.3 Display settings
   - 9.4 Sound settings
   - 9.5 Light settings
   - 9.6 Network services
   - 9.7 Bluetooth
   - 9.8 Security
   - 9.9 Connection settings
   - 9.10 Memory status
   - 9.11 Reset settings

* Available only if a memory card is inserted. Your phone accepts microSD™ memory cards up to 2 GB (depending on memory card manufacturer and type).

Adjusting the volume

1. In Idle mode, press the **Menu** soft key.
2. Select **Settings** → **Sound settings** → **Incoming call** → **Volume**.
3. Press **Left** or **Right** to adjust the volume level.
4. Press the **Save** soft key.

While a call is in progress, press the Volume keys to adjust the earpiece volume.

Changing a ringtone for calls

1. In Idle mode, press the **Menu** soft key.
2. Select **Settings** → **Sound settings** → **Incoming call** → **Ringtone**.
3. Select a ringtone category → a ringtone and press the **Save** soft key.

Redialling recent numbers

1. In Idle mode, press .
2. Press **Left** or **Right** to select a call type.
3. Press **Up** or **Down** to scroll to the number you want.
4. Press to dial the number.

Entering text

Changing the text input mode

- Press # until the input mode indicator you want appears.
- Press and hold * to switch to Symbol mode.

Pinyin mode

1. Press the keys corresponding to the phonetic spelling, pinyin, referring to the letters printed on the keys.

   Example: To enter "你", press **6** and **4** to enter "ni."
2. Press **Left** or **Right** to select alternative pinyins for the keys you pressed.
3. Press to activate the character selection field.
4. If you cannot find the character you want, press **Up** or **Down** to scroll through the word choices.
5. Press the number key corresponding to the character you want.

Stroke mode

1. Press the keys that corresponds to a character's component strokes.

   Example: To enter "力", press **5** for → and **3** for ↙.
2. If you cannot find the character you want, press **Up** or **Down** to scroll through the word choices.
3. Press the number key corresponding to the character.

T9 mode

1. Press **2** to **9** to start entering a word. Press each key once for one letter.
   The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any keystrokes.
   Example: To enter "Hello" in T9 mode, press **4**, **3**, **5**, **5**, and **6**.
2. To display alternative word choices, press **Up** or **Down**.
3. Press **0** to insert a space and enter the next word.

ABC mode

Press the keys labeled with the letter you want once for the first letter, twice for the second letter, and so on.

For example, press **2** three times to enter "C" and **5** two times to enter "K."

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the keys corresponding to the symbols you want and press the **OK** soft key. You can press the Navigation keys to display more symbols.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To delete all of the characters, press and hold **C**.
- To insert a space between characters, press **0**.
- To change case in T9 mode and ABC mode, press *****.
- To enter punctuation marks in T9 mode or ABC mode, press **1**.

Sending an SMS message

1. In Idle mode, press the **Menu** soft key.
2. Select **Messages** → **Create message** → **Text message**.
3. Enter the message text.
4. Press the **Options** soft key and add items using the following options:
   - **Insert**: add text templates. Phonebook contacts, or bookmark items.
   - **Add image**: add images.
   - **Add animation**: add emotions or animations.
   - **Add melody**: add sounds.
   - **Attach**: attach a contact, calendar item, memo, or task.
5. Press the **Options** soft key and select **Send only** or **Save and send**.
6. Enter a destination number.
7. Press the **Options** soft key and select **Send** to send the message.

Taking a photo

1. In Idle mode, press and hold [camera].
2. Aim the lens at the subject and make any desired adjustments.
3. Press [camera] or [OK] to take a photo. The photo is saved automatically.
4. Press the **Preview** soft key to take another photo, or press **C** to delete the photo.

Note: You can also record a video. Press **1** to switch to Recording mode.

Quick feature reference

This section provides brief explanations of features on your phone.

Menu	Description
Menu > Call log > Recent contacts, Missed calls, Dialled calls, or Received calls	View the most recent calls you have dialled, received, or missed.
Menu > Call log > Delete all	Delete the call logs in each call type, or all logs at once.
Menu > Call log > Call manager	View the duration of recent calls you have dialled and received, and the cost of your calls, if supported by your SIM card. Also, make a list of the phone numbers from which you want to reject calls.
Menu > Phonebook > Contact list	Search for contacts in Phonebook.
Menu > Phonebook > Create contact	Add a new contact to Phonebook.
Menu > Phonebook > Group	Create a group and select a ringtone or image for incoming calls and messages from members of a group.
Menu > Phonebook > Speed dial	Assign speed dial numbers (2 to 9) for eight of your most frequently dialled numbers.
Menu > Phonebook > My namecard	Create a name card and send it to other people.
Menu > Phonebook > Own numbers	Check your phone numbers or assign a name to them.
Menu > Phonebook > Management	Copy all contacts on the SIM card to the phone's memory, or delete all contacts. You can also check memory information for Phonebook contacts.
Menu > Applications > Alarm	Set an alarm to sound at a specific time.
Menu > Applications > Music player	Listen to music. You can also make your own music playlists.
Menu > Applications > Voice recorder	Record voice memos and listen to them.
Menu > Applications > FM radio	Listen to music or news via the FM radio on your phone. First, you must connect your phone with the headset, which serves as a radio antenna.
Menu > Applications > Java world	Access the embedded Java games and downloaded Java applications.
Menu > Applications > Memo	Make memos for things that are important and manage them.
Menu > Applications > World clock	Set your local time zone and find out the current time in another part of the world.
Menu > Applications > Calculator	Perform basic arithmetic functions.
Menu > Applications > Converter	Do conversions such as currency and temperature.
Menu > Applications > Timer	Set a period of time for the phone to count down.
Menu > Applications > Stopwatch	Measure elapsed time.
Menu > Browser > Home	Connect your phone to the network and load the homepage of the wireless web service provider.
Menu > Browser > Enter URL	Enter a URL address in order to quickly access web pages.
Menu > Browser > Bookmarks	Save URL address in order to quickly access web pages.
Menu > Browser > Clear cache	Clear the cache, which is a temporary memory site that stores recently accessed web pages.
Menu > Browser > Browser settings	Select a connection profile to be used for accessing the wireless web.
Menu > Messages > Create message > Text message or Multimedia message	Create and send messages to other mobile phones.
Menu > Messages > My messages	Access messages that you have received, sent, or that you have failed in sending.
Menu > Messages > Templates	Preset templates of frequently used messages.
Menu > Messages > Delete all	Delete messages in each message folder, or all messages at once.
Menu > Messages > Settings	Set options for using messaging services.
Menu > Messages > SOS messages	Activate the SOS message feature. Enter recipients and select the repeat mode.
Menu > Messages > Memory status	Check information about the memory currently in use.
Menu > My files > Images, Videos, Music, Sounds, or Other files	Access media files and other files stored in the phone's memory.
Menu > My files > Memory card	Access the files stored on a memory card. This menu is only available when you insert a memory card into the phone.
Menu > Calendar	Keep track of daily or monthly schedule.
Menu > Camera	Take photos in various modes or record videos.
Menu > Settings > Time and date	Set the current time and date manually or set your local time zone.
Menu > Settings > Phone settings > Language	Select a language to be used for the display text or T9 input mode.
Menu > Settings > Phone settings > Slide settings	Set how the phone reacts when you open it for an incoming call, and when you close it while using a function.
Menu > Settings > Phone settings > Shortcuts	Set the Navigation keys as shortcuts to access your favourite menus directly.
Menu > Settings > Phone settings > My menu	Set up a menu of your own using your favourite menu items, which can be easily accessed by pressing **Up** in Idle mode.
Menu > Settings > Phone settings > Volume key	Set whether the phone mutes the call ringer or rejects a call if you press and hold the Volume keys when a call comes in.
Menu > Settings > Phone settings > Extra settings	Set the automatic redialling feature or the answering method.
Menu > Settings > Phone settings > Offline mode	Switch the phone to Offline mode. This mode is helpful when you want to use your phone in a place where you are not allowed to use mobile devices, such as in an aeroplane and at a hospital.
Menu > Settings > Display settings	Change the settings for the display.
Menu > Settings > Sound settings	Change the settings for the various sounds.
Menu > Settings > Light settings	Change the settings for the backlight and keypad light.
Menu > Settings > Network services	Access network services offered by your service provider.
Menu > Settings > Bluetooth	Connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.
Menu > Settings > Security > PIN check	Activate your PIN to protect your SIM card against unauthorised use.
Menu > Settings > Security > Change PIN code	Change the PIN.
Menu > Settings > Security > Phone lock	Activate your phone password to protect your phone against unauthorised use.
Menu > Settings > Security > Change password	Change the phone password.
Menu > Settings > Security > Privacy	Lock access to messages, files, or all menu functions on the phone, except for call functions.
Menu > Settings > Security > SIM lock	Set the phone to work only with the current SIM card by assigning a SIM lock password.
Menu > Settings > Security > Fixed dialling mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your SIM card.
Menu > Settings > Security > Change PIN2 code	Change your current PIN2, if supported by your SIM card.
Menu > Settings > Security > Mobile tracker	Track your phone when it is stolen or lost. When someone tries to use your phone with other SIM card, the phone will automatically send the preset tracking message to your family or friends. This feature may be unavailable due to certain features supported by your service provider.
Menu > Settings > Connection settings	Create and customise the profiles containing the settings for connecting your phone to the network.
Menu > Settings > Memory status	Check information about the memory currently in use.
Menu > Settings > Reset settings	Reset the phone to the factory default settings.

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving; park your vehicle first.

Switching off when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching off near all medical equipment

Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special regulations

Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press [end]. Do not end the call until given permission to do so.

Small children and your phone

Keep the phone and all its parts including accessories out of reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage your phone and may be dangerous.

CAUTION Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

At very high volume, prolonged listening to a headset can damage your hearing.

Use of authorised software

Use only Samsung-authorised software. The use of any unauthorised software could damage your phone.

Qualified service

Only qualified service personnel may repair your phone.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg.